

FM UNIT

UT-28S/50S/220S UT-440S/1200

INSTRUCTION MANUAL

KENWOOD

KENWOOD CORPORATION

©PRINTED IN JAPAN B62-0089-10 (M/T)
92/12 11 10 9 8 7 6 5 4 3 2 1 91/12 11 10 9 8

Thank you for purchasing this new FM unit.

■ INSTALLATION and OPERATIONS

The same instructions apply for the Tri-Bander as for the Dual-bander. Refer to the instruction manual provided with the transceiver.

Any of the following optional band units may be installed in the TM-741A/741E.

	OPTIONAL BAND UNIT
TM-641A/741A U.S.A. version	UT-28S UT-50S UT-220S UT-440S (TM-641A only) UT-1200
TM-741A	UT-28S UT-50S UT-1200
TIM-741E	UT-28S UT-50S UT-1200

■ ACCESSORIES

Unpack your new equipment carefully, and confirm that the accessories listed below are included in the box.

Terminal plate E23-0657-04 1 ea.

Screw set N99-0355-05 1 ea.

SEMS Screw for terminal plate

N09-2084-05 1 ea.

Long Screws for unit... N30-3040-46 2 ea.

Nuts..... N10-2030-46 2 ea.

Screws for unit N88-2606-46 2 ea.

Lock rings..... J69-0325-05 2 ea.


Adhesive sheet G11-0665-04 1 sheet

Label for antenna connector


B42-3488-04 1 sheet


Instruction Manual B62-0089-XX 1 copy

UT-28S/50S/220S/440S/1200 3/3

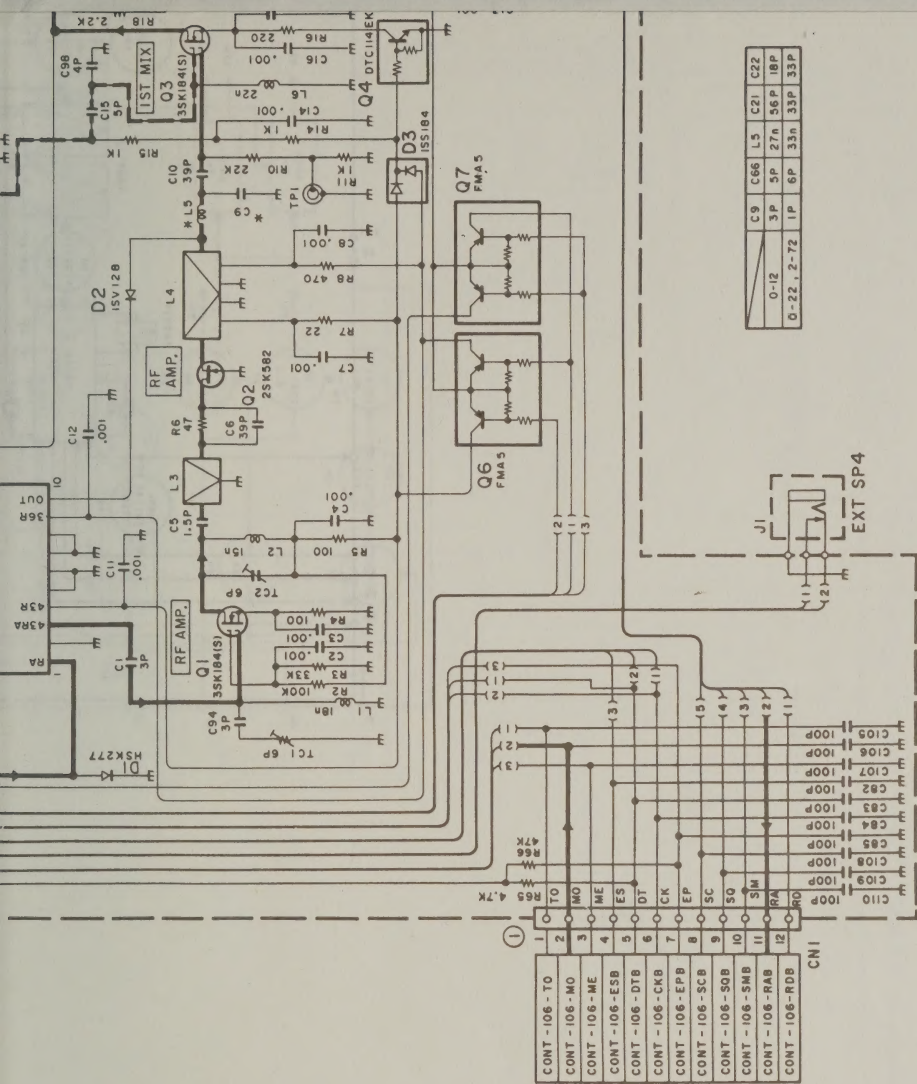


	C9	C66	L5	C21	C22
0-12	3P	5P	27n	56P	18P
0-22, 2-72	1P	6P	33n	33P	33P

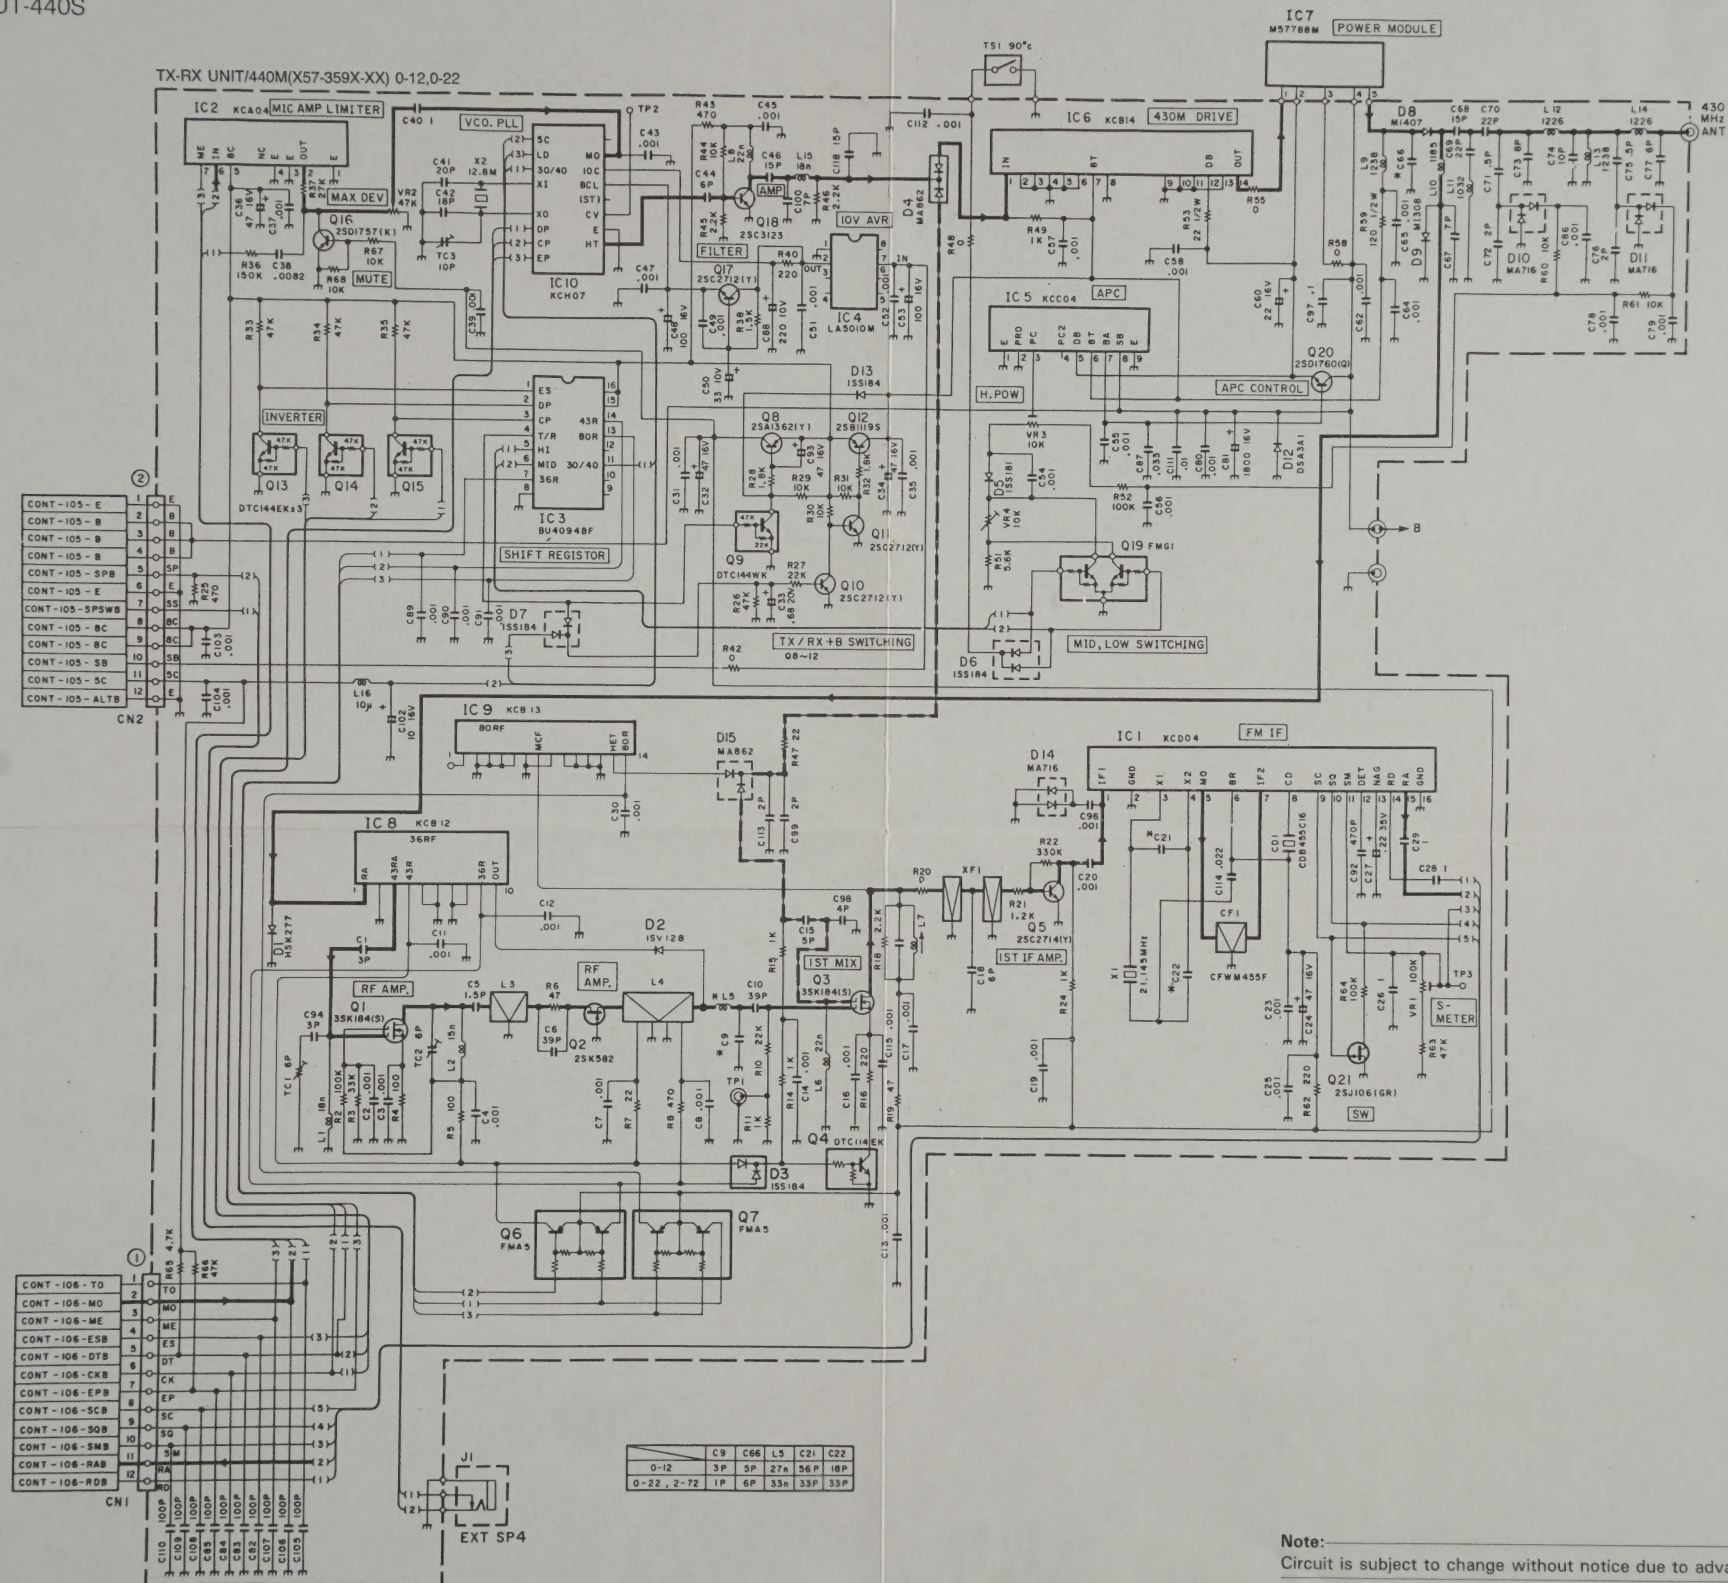

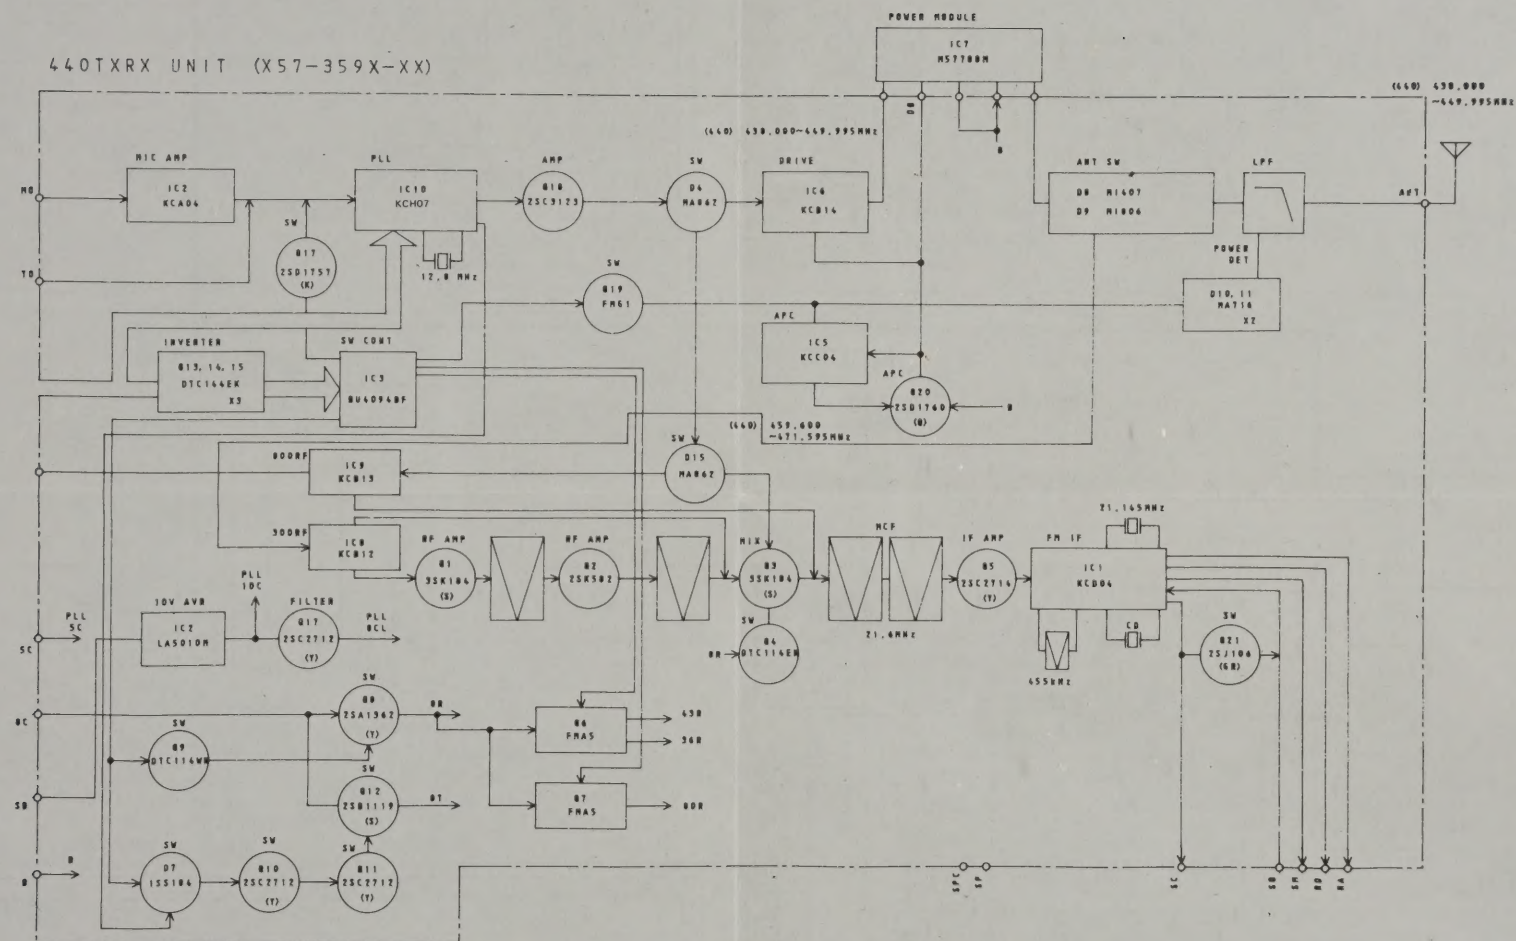


SCHEMATIC DIAGRAM UT-440S

TX-RX UNIT/440M(X57-359X-XX) 0-12,0-22

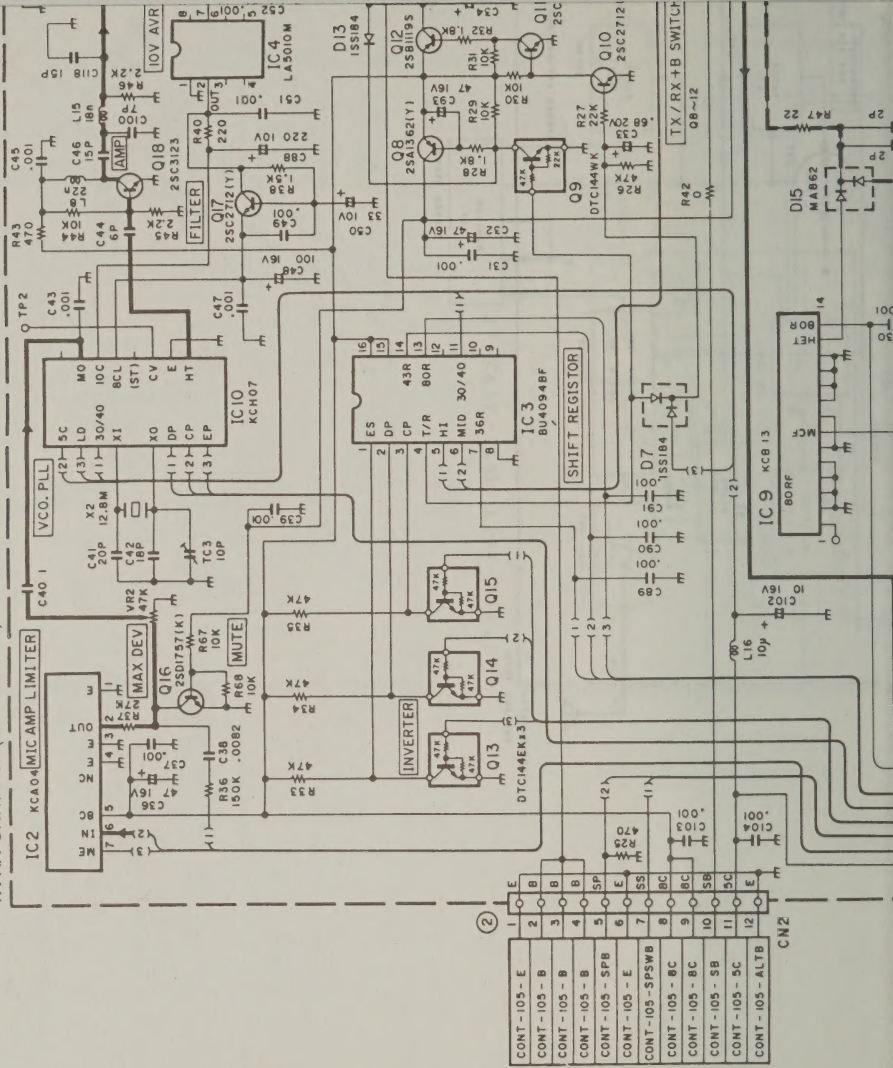

To activate the optional band unit, reset the memory for the band.

1. Turn the POWER switch OFF.
2. Press and hold the F key and the BAND SEL key for the band, then turn ON the POWER switch. After 1 second all the indicators for the band will light.

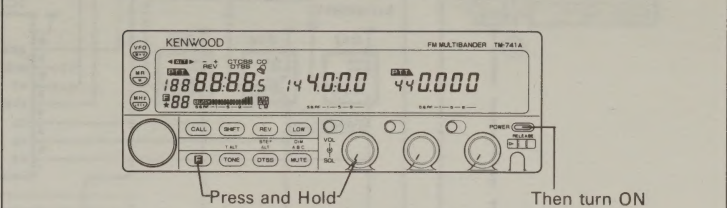

3. Confirm the indicators, then release the F key and the BAND SEL key.
The initial settings will be displayed, the PTT indicator will flash three times, and a beep will sound, then the memory reset will be finished.

